


100mm SUB MOTOR (KR) PARTS LIST

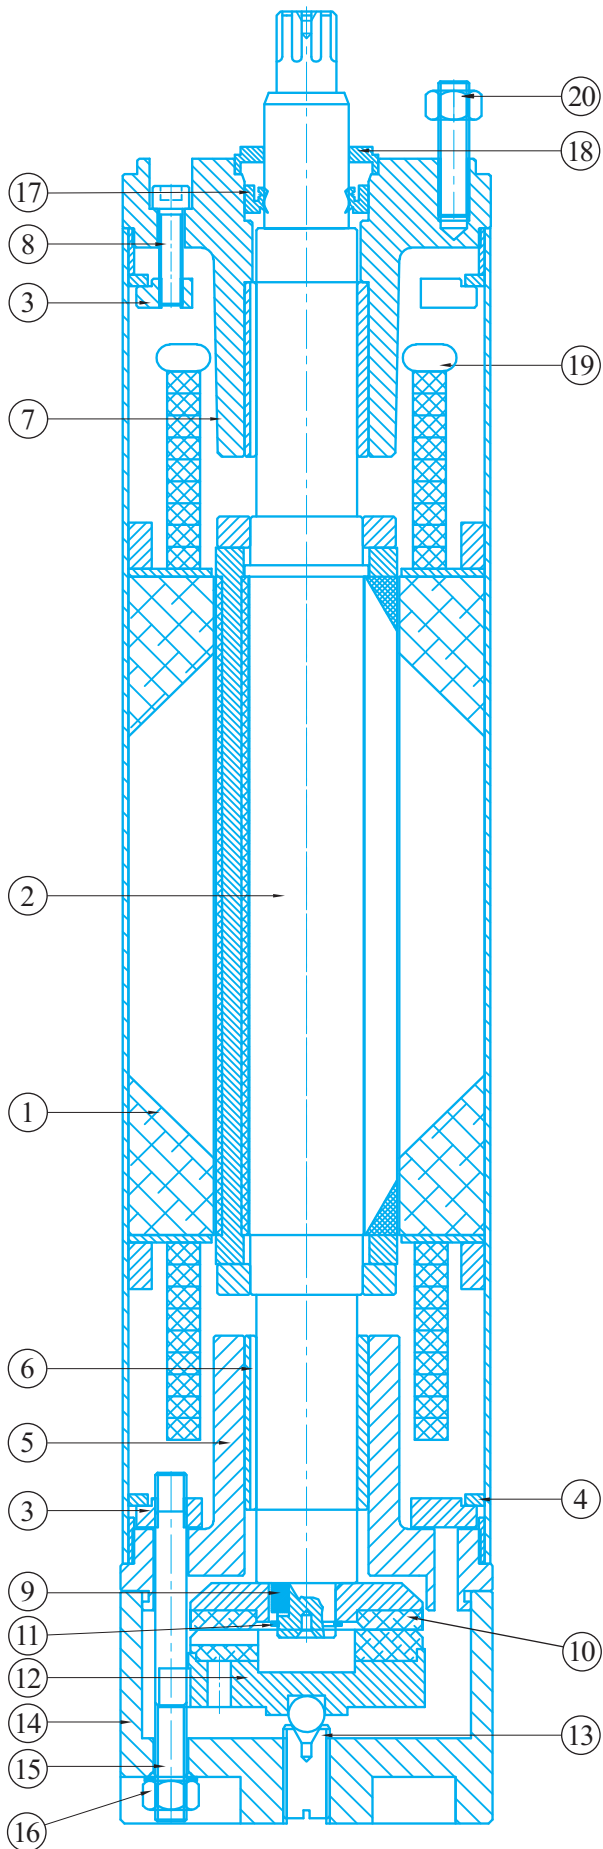

S. NO.	DESCRIPTION
1.	STATOR ASSEMBLY
2.	ROTOR ASSEMBLY
3.	STUD RING LOWER, UPPER
4.	SNAP RING
5.	HOUSING LOWER
6.	BUSH-HOUSING
7.	HOUSING UPPER
8.	ALLEN SCREW FOR UP. HOUSING
9.	KEY - 5 x 5 x 8
10.	THRUST BEARING PAD
11.	CIRCLIP - A14
12.	THRUST BEARING BOTTOM
13.	TREAD PIN
14.	BASE
15.	STUD FOR BASE
16.	NUT
17.	OIL SEAL
18.	SAND GUARD
19.	STATOR WINDING
20.	STUD & NUT FOR SUC. HOUSING